

# PARTS LIST

BC4321H-RS

## CONTENTS


1. MAIN BODY .....	1 ~ 4
2. GEARCASE.....	5 ~ 6
3. ENGINE.....	7 ~ 10
4. CARBURETOR, FUEL TANK .....	11 ~ 14
5. ACCESSORIES .....	15 ~ 16

2016. 01.



P/N 524234

1. BC4321H-RS  
MAIN BODY

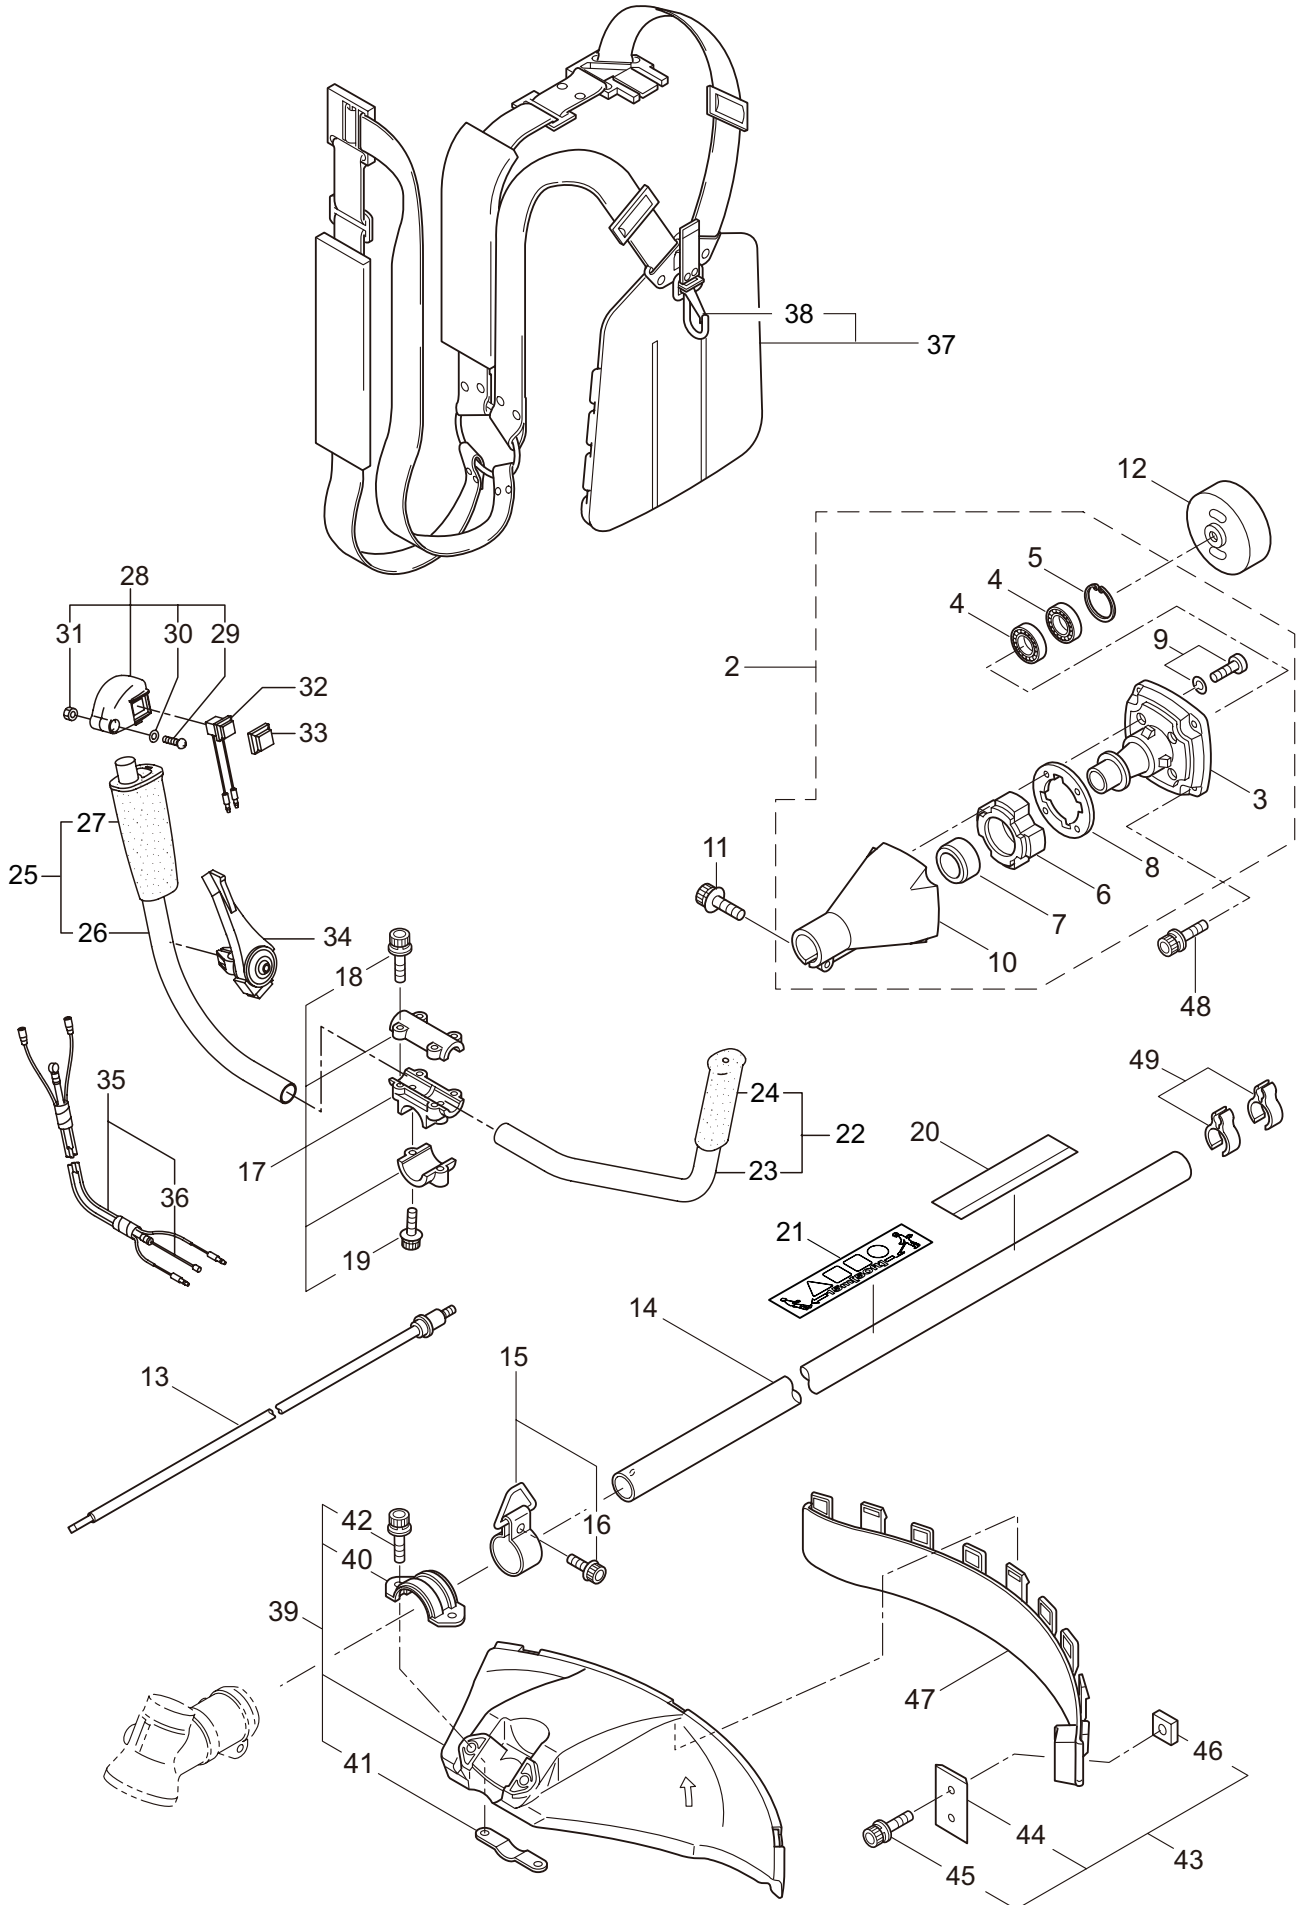


Ref. No.	Part No.	Part Name	Q'ty	Remarks
1-1	364595	BC4321H-RS	1	
1-2	234162	Clutch Case Ass'y	1	Incl.3-10
1-3	234143	Bearing Case	1	
1-4	140474	Bearing	2	#6202ZZ
1-5	012380	Snap Ring	1	#35
1-6	217045	Buffer (A)	1	
1-7	217046	Buffer (B)	1	
1-8	217047	Washer	1	
1-9	092033	Screw	4	M5x15
1-10	227728	Driveshaft Tube Adapter	1	
1-11	217134	Bolt	1	M6x30
1-12	211203	Clutch Drum	1	
1-13	217897	Driveshaft Ass'y	1	
1-14	217900	Driveshaft Tube	1	
1-15	231887	Hanging Bracket Ass'y	1	Incl.16
1-16	261762	Cap Screw	1	M5x14
1-17	231888	Bracket Ass'y	1	Incl.18,19
1-18	217138	Bolt	4	M6x25
1-19	217134	Bolt	2	M6x30
1-20	233626	Label	1	BC4321H-RS-01
1-21	213750	Label	1	Caution
1-22	230867	Handle Ass'y-Left	1	Incl.23,24
1-23	219157	Handle	1	
1-24	226932	Handle Grip	1	
1-25	230868	Handle Ass'y-Right	1	Incl.26,27
1-26	219160	Handle	1	
1-27	226934	Handle Grip	1	
1-28	226963	Switch Case Ass'y	1	Incl.29-31
1-29	226988	Screw	1	M5x18
1-30	012487	Washer	1	M5
1-31	126993	Nut	1	M5
1-32	226987	Switch, Stop	1	
1-33	222138	Cover, Switch	1	
1-34	103032	Throttle Lever	1	
1-35	229833	Wire Ass'y	1	Incl.36
1-36	229834	Wire, Throttle	1	
1-37	219612	Hanging Strap Ass'y	1	Incl.38
1-38	231657	Hook	1	
1-39	231961	Safety Cover Ass'y	1	Incl.40-42
1-40	223179	Bracket	1	
1-41	237364	Threaded Bracket	1	
1-42	220632	Cap Screw	2	M6x30
1-43	231882	String Cutter Ass'y	1	Incl.44-46
1-44	230747	String Cutter	1	
1-45	261250	Cap Screw	1	M5x20




Ref. No.	Part No.	Part Name	Q'ty	Remarks
1-46	228325	Nut	1	
1-47	230748	Cover Extention	1	
1-48	219113	Cap Screw	4	M6x20
1-49	219161	Wire Guide	2	

2. BC4321H-RS  
GEARCASE

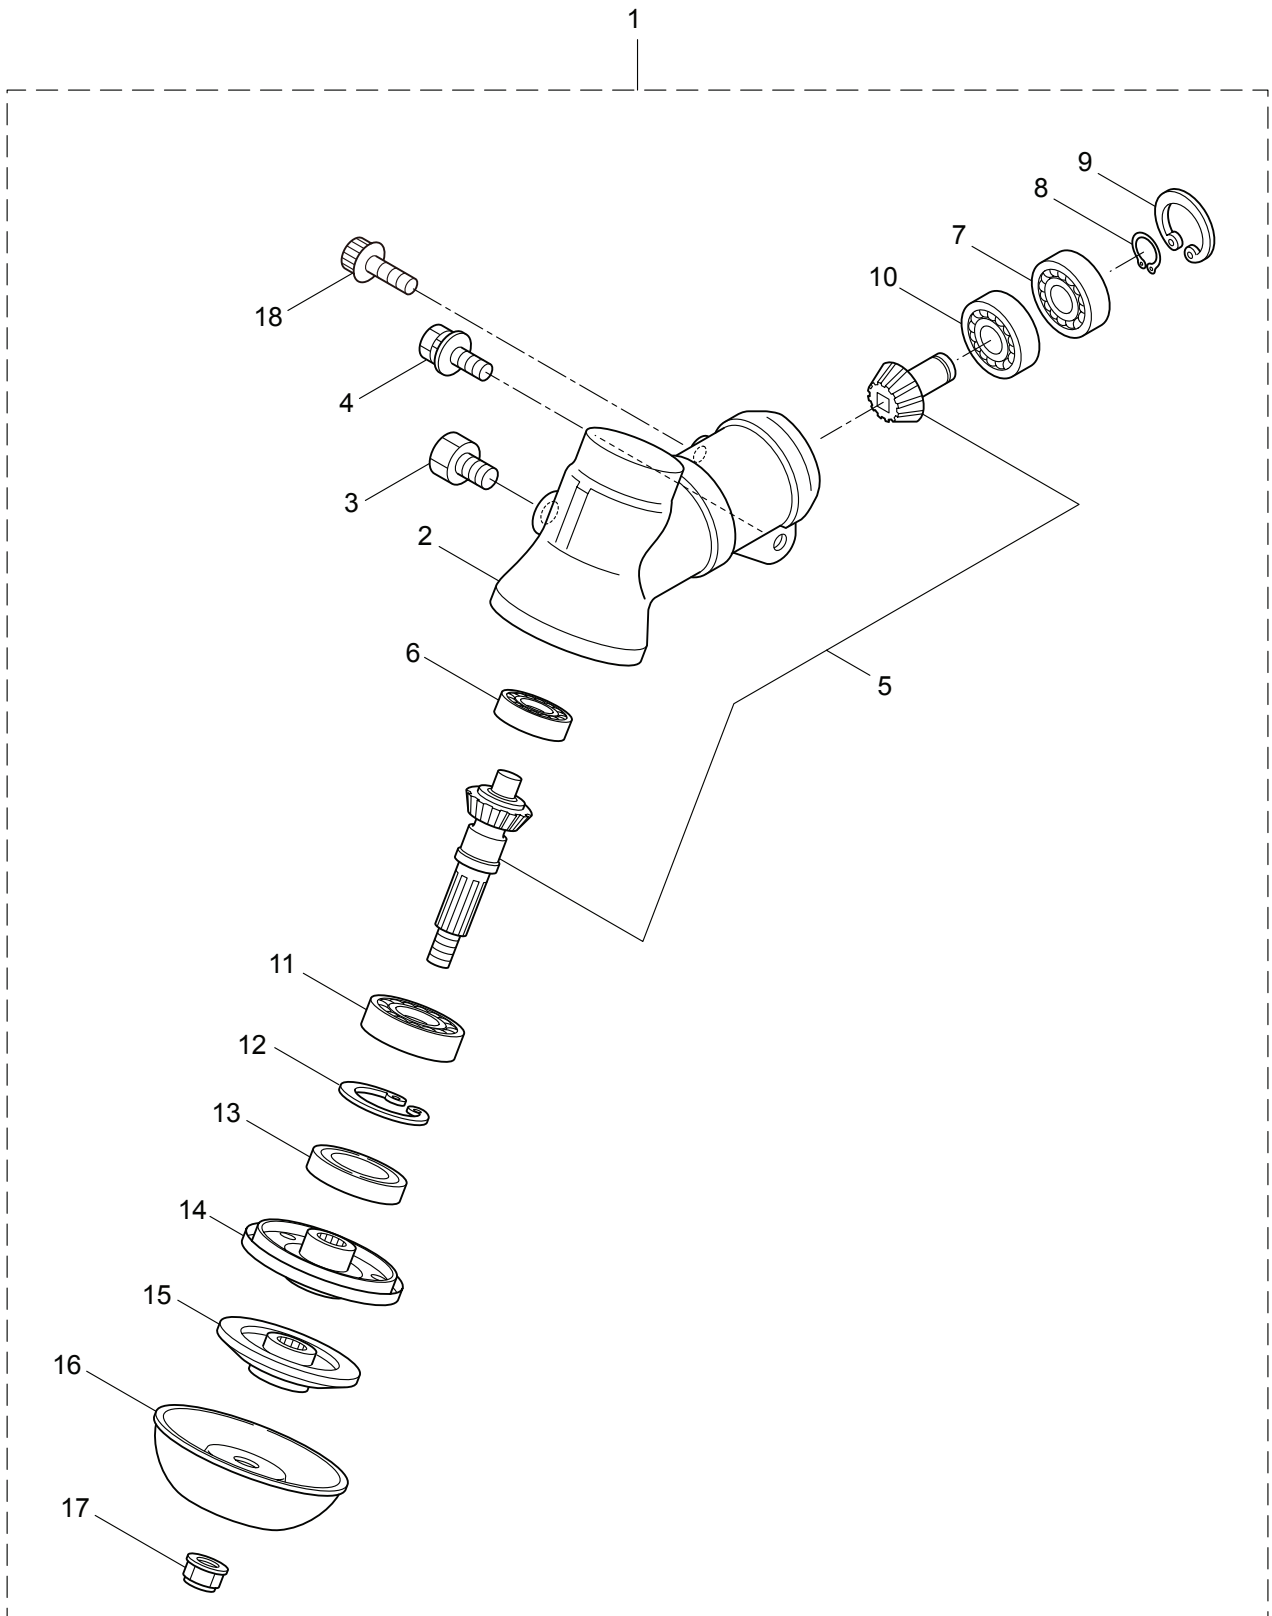

Ref. No.	Part No.	Part Name	Q'ty	Remarks
2-1	234835	Gearcase Ass'y	1	Incl.2-18
2-2	232833	Gearcase	1	
2-3	234109	Bolt	1	M8x8
2-4	217134	Bolt	1	M6x30
2-5	234349	Gear Set	1	
2-6	014490	Bearing	1	#6000
2-7	106933	Bearing	1	#6000Z
2-8	014210	Snap Ring	1	#10
2-9	054676	Snap Ring	1	#26
2-10	014490	Bearing	1	#6000
2-11	012544	Bearing	1	#6202
2-12	012380	Snap Ring	1	#35
2-13	232049	Oil Seal	1	D21355
2-14	232322	Bracket A Ass'y	1	
2-15	232052	Bracket B	1	
2-16	230849	Stabilizer	1	
2-17	232920	Nut	1	M10x1.25
2-18	217135	Bolt	1	M6x10


3. BC4321H-RS  
ENGINE

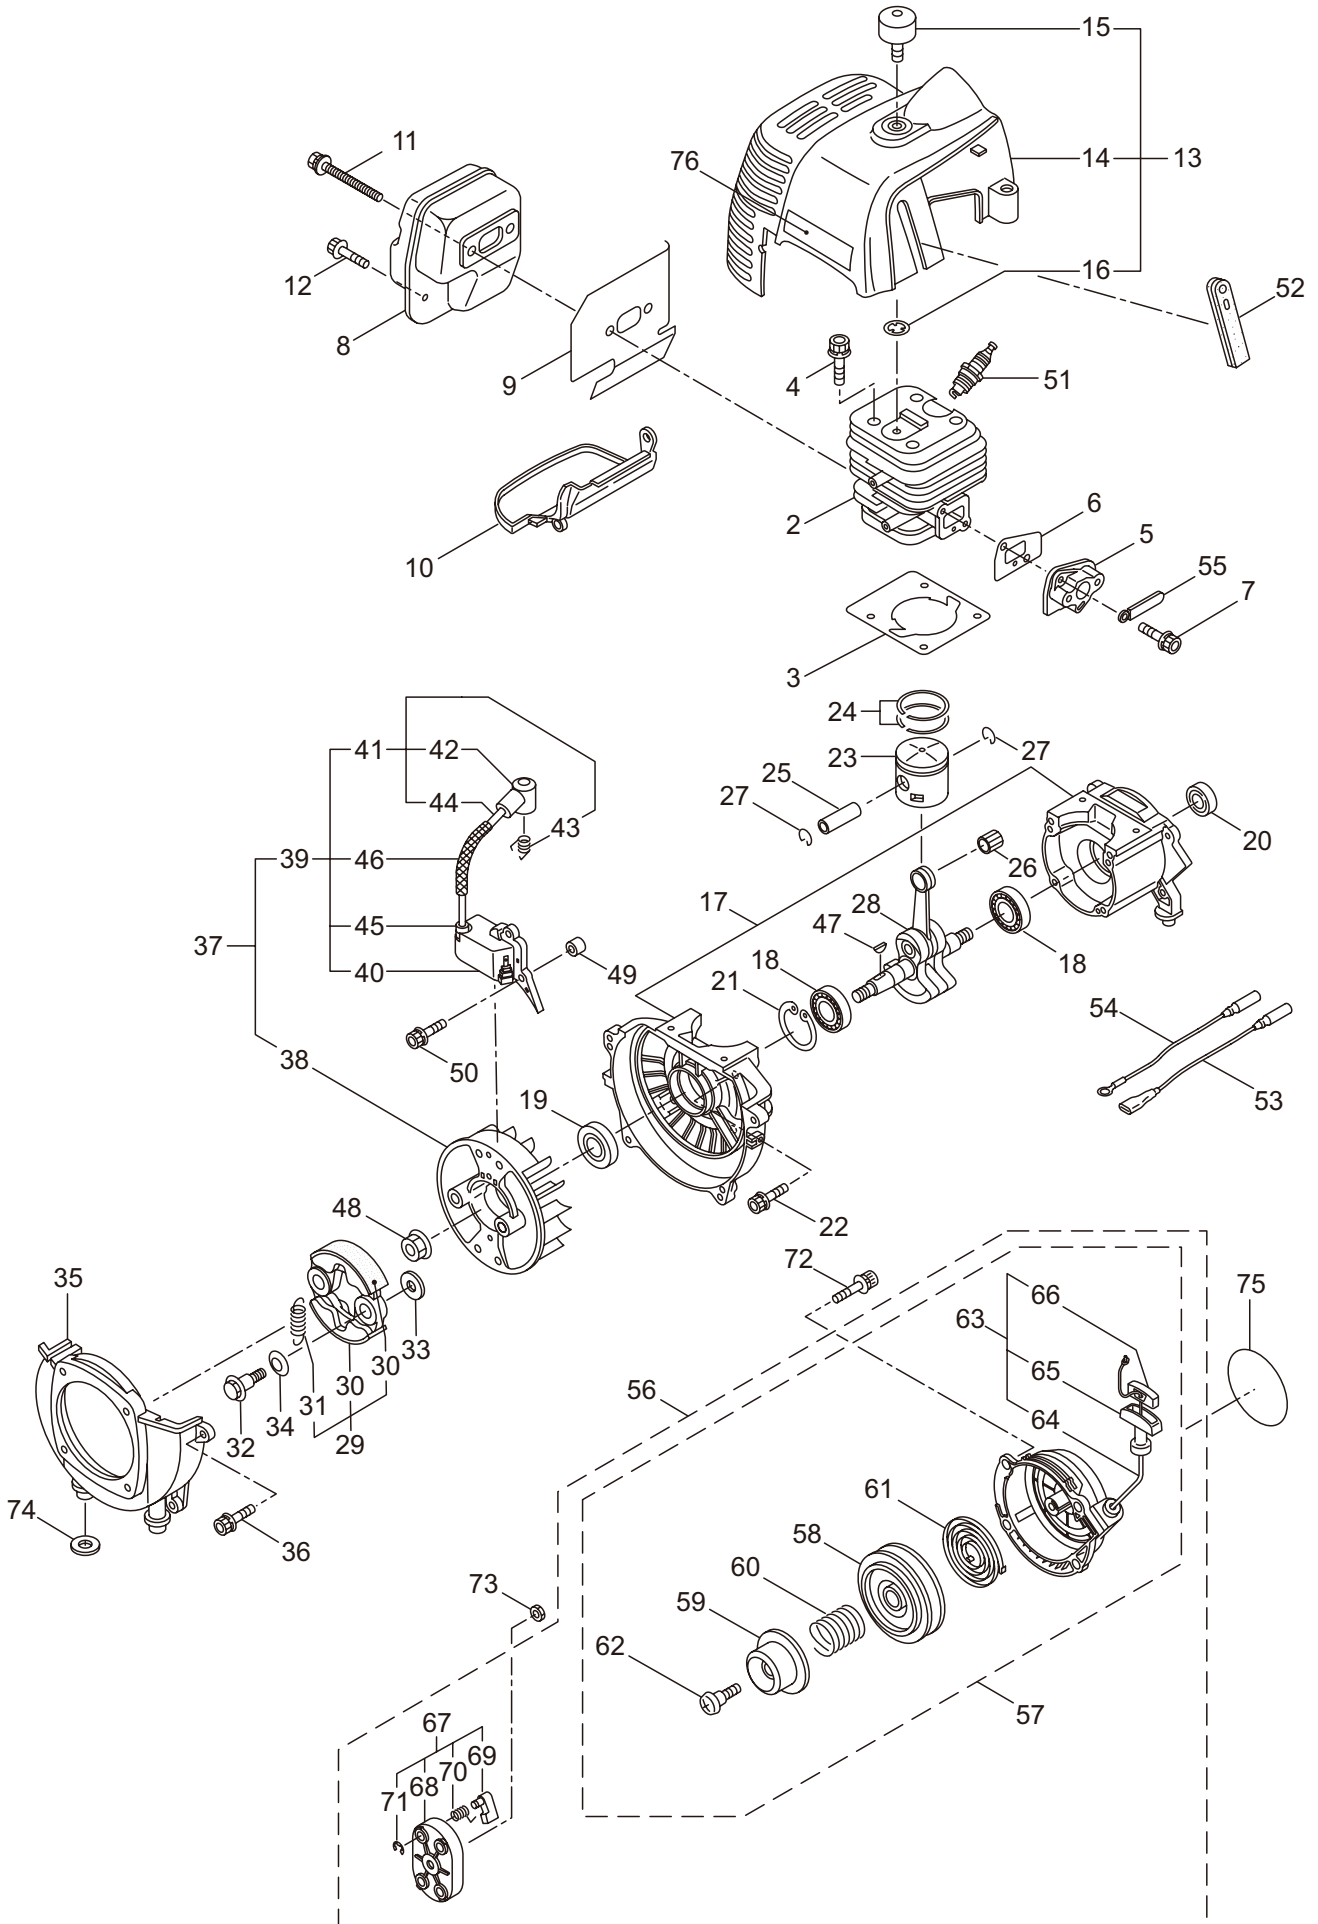




Ref. No.	Part No.	Part Name	Q'ty	Remarks
3-1	859820	Engine	1	CE420/18
3-2	286278	Cylinder	1	New gasket required
3-3	285772	Gasket	1	
3-4	261246	Cap Screw	4	M5x25
3-5	285778	Insulator	1	New gasket required
3-6	285779	Gasket	1	
3-7	265924	Cap Screw	2	M5x25
3-8	285781	Muffler Comp	1	
3-9	285783	Gasket	1	
3-10	285784	Under Cover	1	
3-11	266713	Cap Screw	2	M5x60
3-12	283315	Screw	1	M5x12W-12
3-13	286891	Top Cover Ass'y	1	Incl.14-16
3-14	285786	Top Cover	1	
3-15	285843	Knob	1	
3-16	286362	Washer	1	M6
3-17	285789	Crankcase	1	
3-18	262658	Bearing	2	#6202C3
3-19	262660	Oil Seal	1	TC15357
3-20	262565	Oil Seal	1	ISCD15257
3-21	012380	Snap Ring	1	#35
3-22	261612	Cap Screw	4	M5x30
3-23	285795	Piston	1	
3-24	262476	Piston Ring	2	(2)Required
3-25	262749	Piston Pin	1	
3-26	262659	Bearing,Needle	1	KTV111414EG01B2
3-27	262479	Clip,Piston Pin	2	
3-28	285797	Crankshaft/Conn.Rod Ass'y	1	
3-29	282743	Clutch Ass'y	1	Incl.30,31
3-30	282624	Clutch Shoe	2	(2)required
3-31	263617	Spring,Clutch	1	2.3-44.8L
3-32	283671	Cap Screw	2	M8x1.25
3-33	262683	Washer	2	8x22xt1.2
3-34	262682	Wave Washer	2	
3-35	282285	Fan Cover	1	
3-36	261250	Cap Screw	4	M5x20
3-37	285803	Magneto Ass'y	1	Incl.38-46
3-38	286207	Rotor/Fan	1	
3-39	285804	Ignition Coil Ass'y	1	Incl.40-46
3-40	285805	Coil	1	
3-41	285806	Spark Plug Wire Ass'y	1	Incl.42-44
3-42	261074	Plug Boot	1	
3-43	261075	Connector	1	
3-44	286273	Spark Plug Wire	1	
3-45	261072	Cap	1	

3. BC4321H-RS  
ENGINE

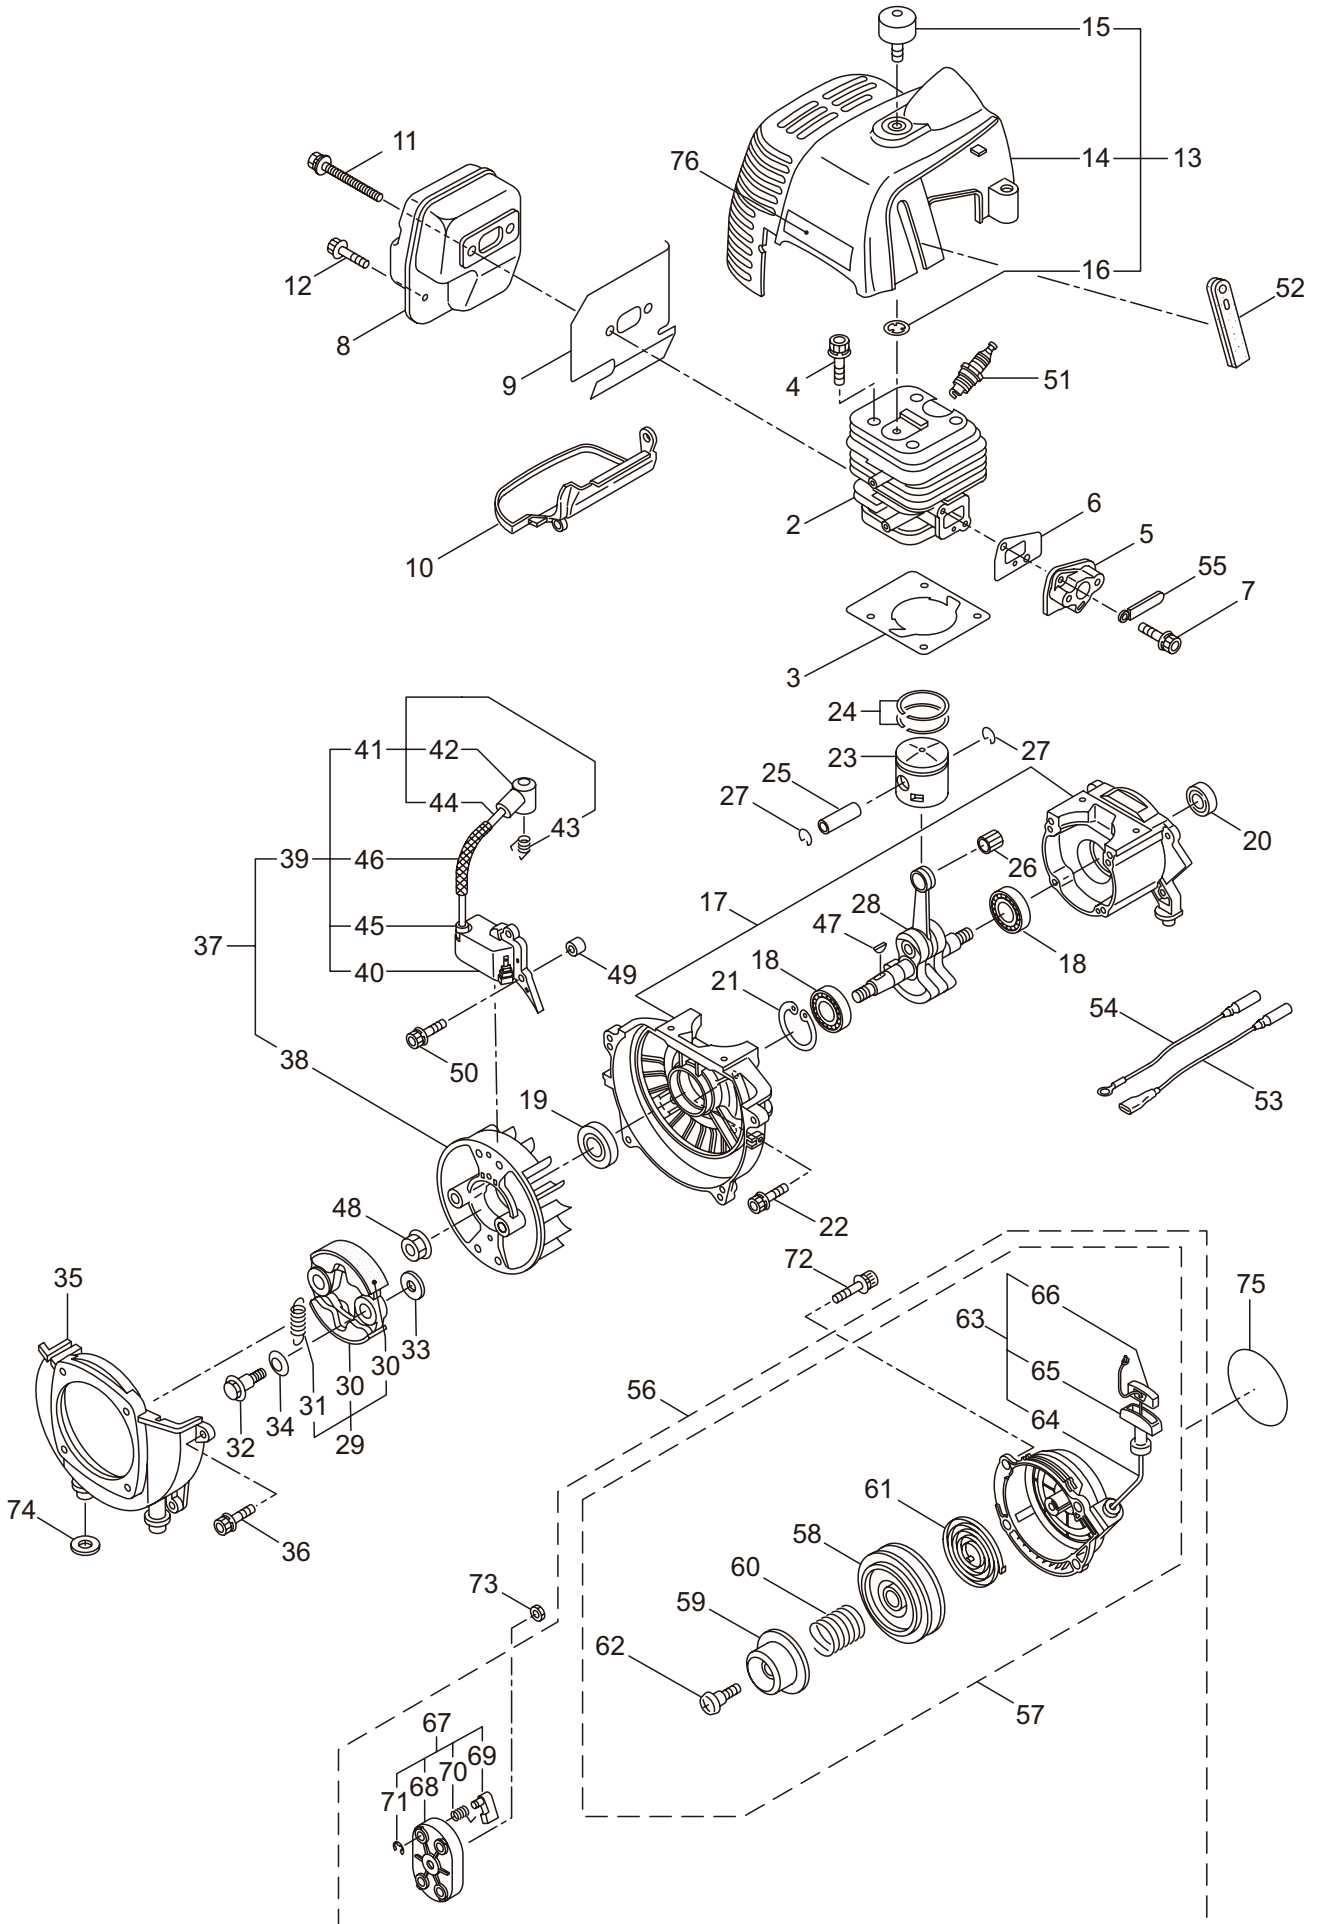


Ref. No.	Part No.	Part Name	Q'ty	Remarks
3-46	284759	Insulator	1	
3-47	261076	Woodruff Key	1	3x10
3-48	262731	Nut,Rotor	1	M10
3-49	280381	Spacer	2	
3-50	261256	Cap Screw	2	M4x25
3-51	285982	Spark Plug	1	NGK BPM8Y
3-52	286988	Grommet	1	
3-53	283735	Wire, Coil	1	
3-54	284541	Wire,Lead	1	
3-55	264588	Clamp	1	
3-56	285809	Recoil Starter Ass'y	1	Incl.57-71
3-57	285810	Starter Ass'y	1	Incl.58-66
3-58	286291	Reel	1	
3-59	286292	Cam Plate	1	
3-60	286293	Damper Spring	1	
3-61	280995	Spiral Spring	1	
3-62	286295	Set Screw	1	
3-63	286296	Starter Rope Ass'y	1	Incl.64-66
3-64	286297	Starter Rope	1	3.8x1000
3-65	262633	Starter Grip	1	
3-66	262981	Cap	1	
3-67	285679	Starter Pulley Ass'y	1	Incl.68-71
3-68	285680	Starter Pulley	1	
3-69	285681	Pawl	2	
3-70	285682	Return Spring	2	
3-71	262638	E-Ring	2	
3-72	268940	Screw	4	M5x18
3-73	285736	Nut	1	M8
3-74	285735	Packing	4	
3-75	289948	Label	1	MARUYAMA
3-76	262714	Label	1	MARUYAMA

4. BC4321H-RS  
CARBURETOR, FUEL TANK

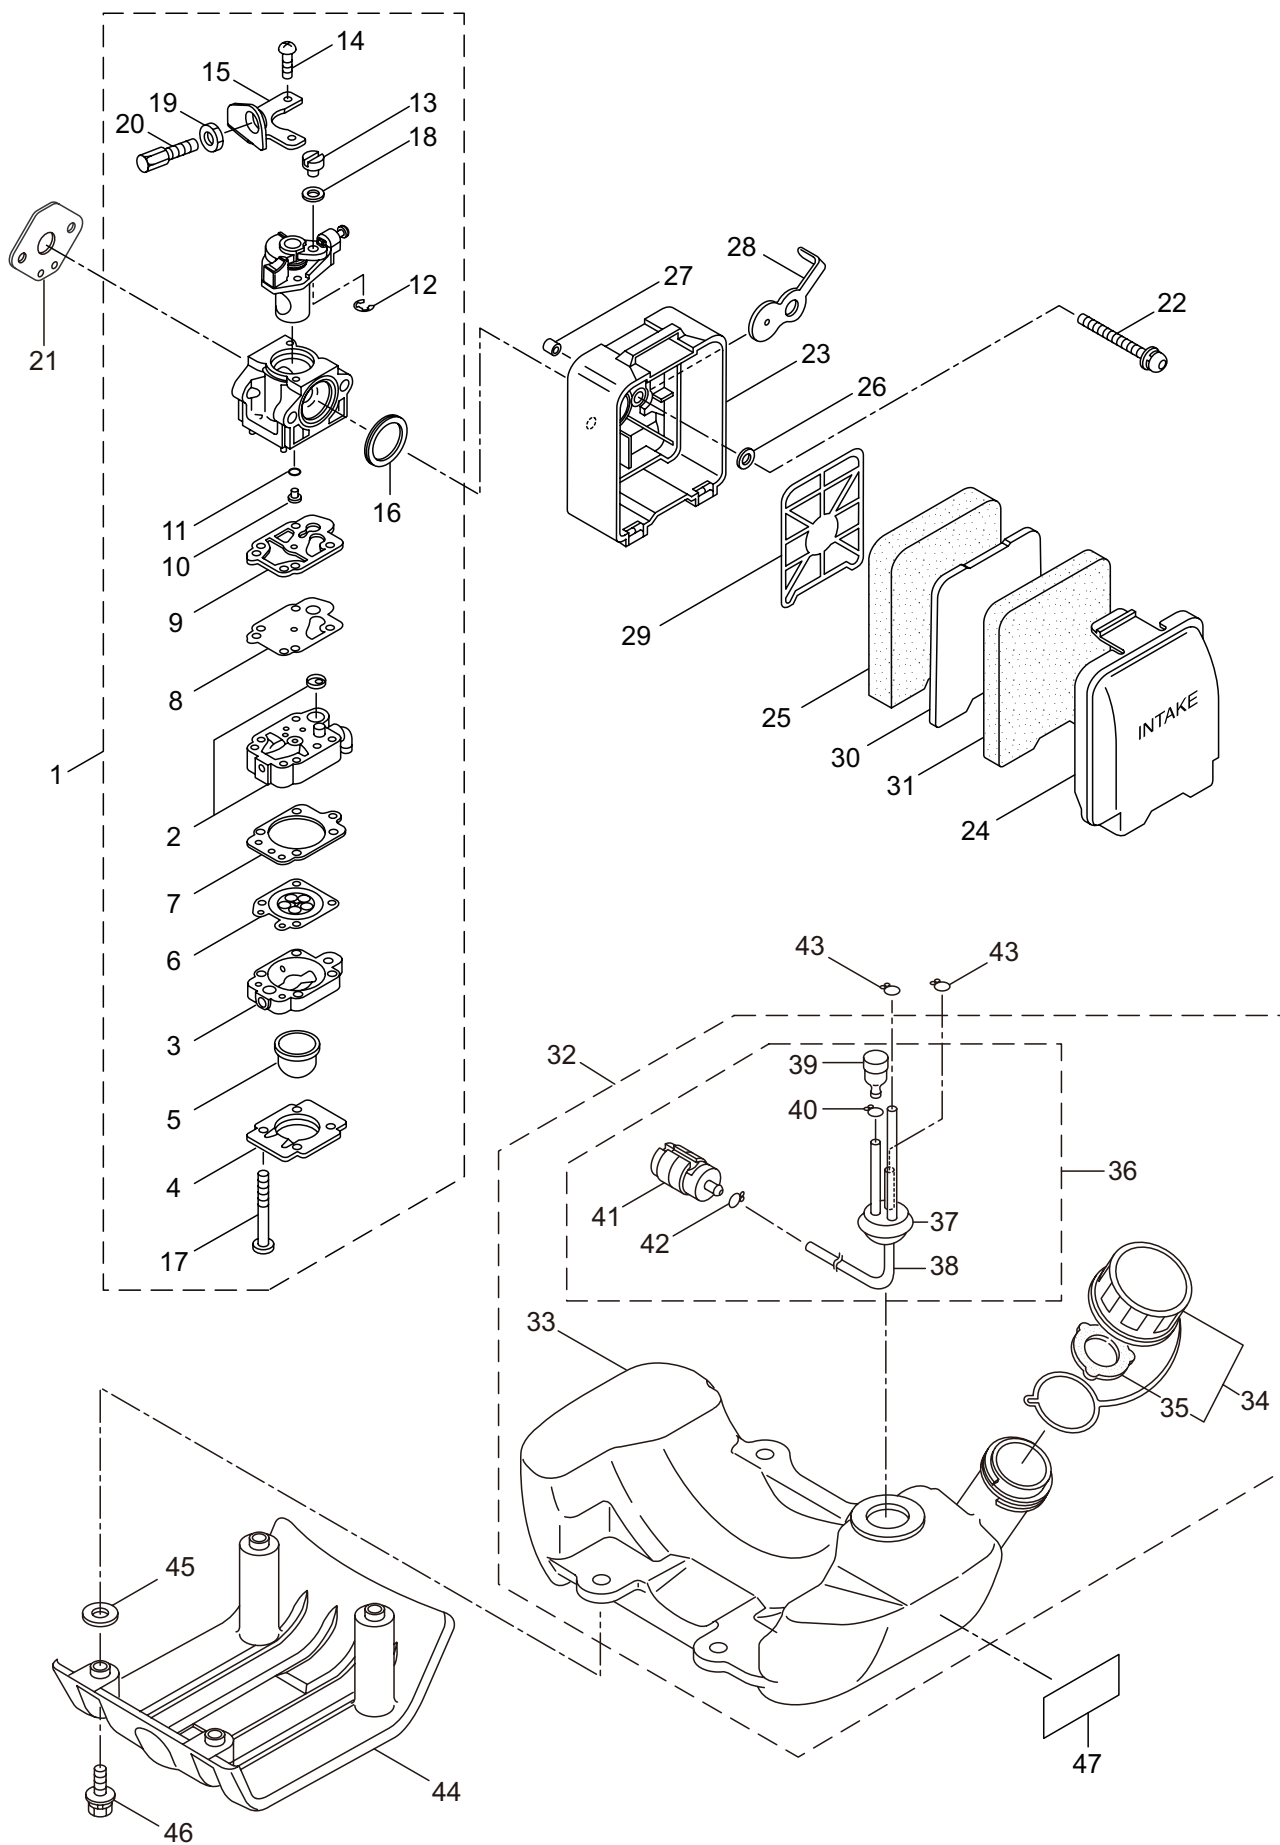












Ref. No.	Part No.	Part Name	Q'ty	Remarks
4-1	276169	Carburetor Ass'y	1	Incl.2-20 New gasket required
4-2	263739	Pump Body	1	
4-3	262991	Purge Body	1	
4-4	262992	Cover Plate	1	
4-5	261874	Primer Bulb	1	
4-6	283905	Diaphragm, Meterring	1	
4-7	262993	Gasket	1	
4-8	262994	Diaphragm,Fuel Pump	1	
4-9	282576	Gasket	1	
4-10	287061	Main Jet	1	
4-11	261871	O-Ring	1	
4-12	261876	E-Ring	1	
4-13	261658	Swivel	1	
4-14	261875	Screw	2	
4-15	264677	Bracket	1	
4-16	261657	Packing	1	
4-17	262996	Screw	4	
4-18	264678	Washer	1	
4-19	261878	Nut	1	
4-20	263994	Adapter	1	
4-21	282301	Gasket	1	
4-22	262720	Cap Screw	2	M5x55
4-23	263723	Housing	1	
4-24	263713	Air Filter Cover	1	
4-25	263714	Foam Element	1	
4-26	263000	Washer	1	
4-27	263715	Sleeve	2	
4-28	263007	Choke Valve	1	
4-29	263717	Screen	1	
4-30	274080	Element F	1	
4-31	285424	Element S	1	
4-32	286893	Fuel Tank Ass'y	1	Incl.33-42
4-33	286067	Fuel Tank	1	
4-34	281564	Fuel Tank Cap Ass'y	1	Incl.35
4-35	269377	Gasket	1	
4-36	286794	Fuel Pipe Pick-up Ass'y	1	Incl.37-42
4-37	268065	Grommet	1	
4-38	262649	Fuel Pipe	1	
4-39	261590	Breather	1	
4-40	261117	Clip	1	
4-41	267328	Fuel Filter Ass'y	1	
4-42	261117	Clip	1	
4-43	261117	Clip	2	
4-44	285819	Stand	1	
4-45	285735	Packing	4	

4. BC4321H-RS  
CARBURETOR, FUEL TANK

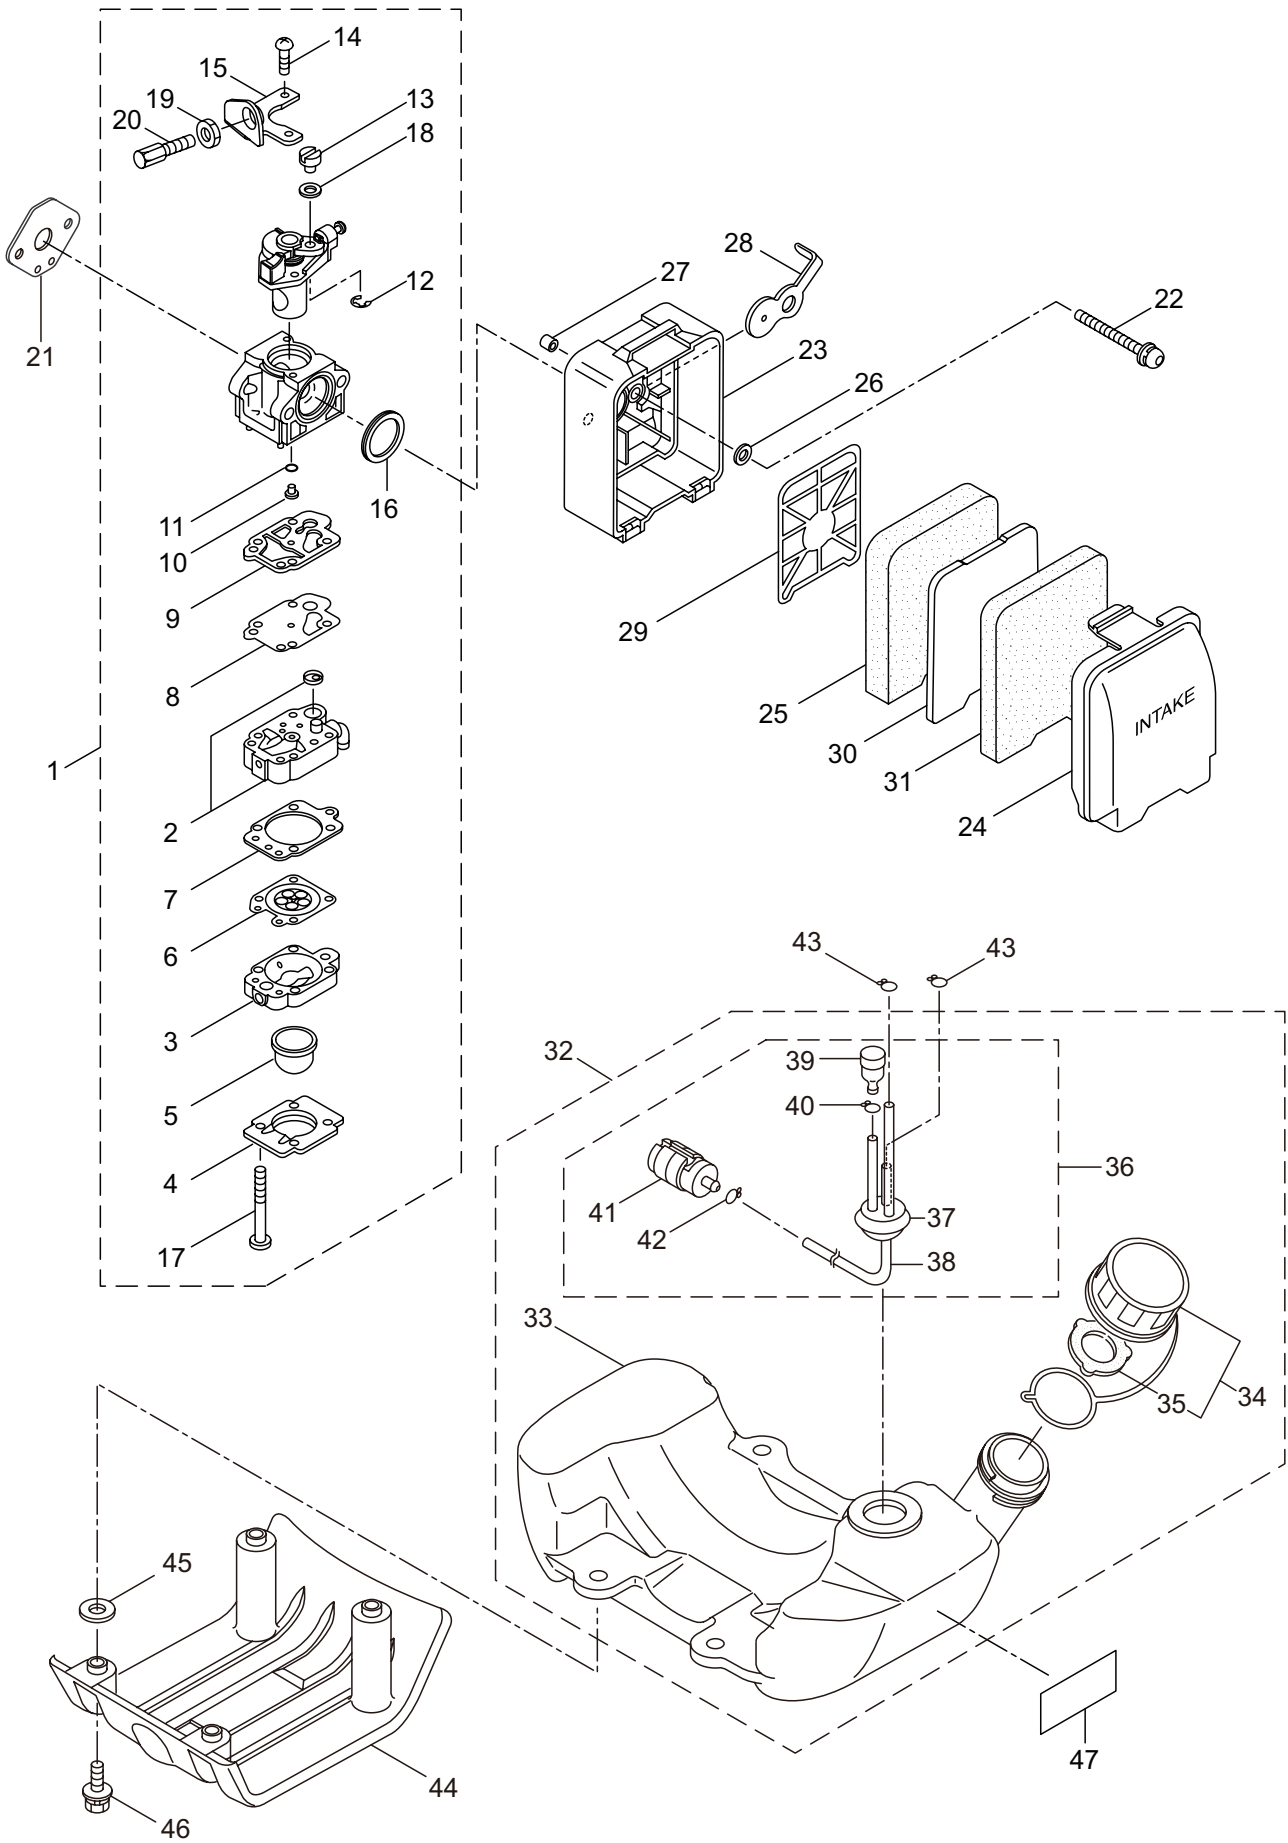

Ref. No.	Part No.	Part Name	Q'ty	Remarks
4-46	281714	Cap Screw	4	M5x20
4-47	283207	Label	1	

5. BC4321H-RS  
ACCESSORIES

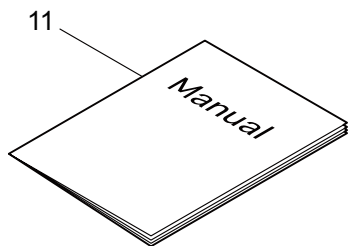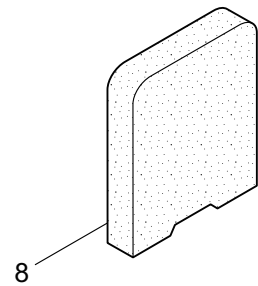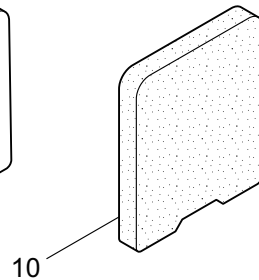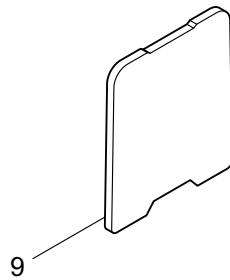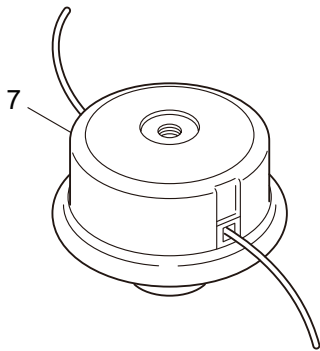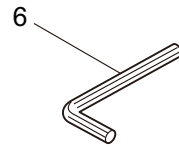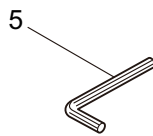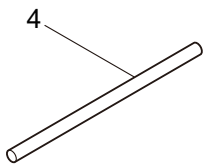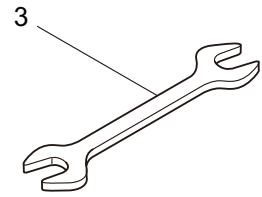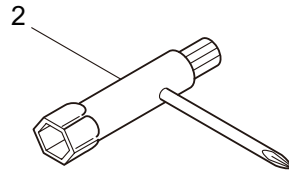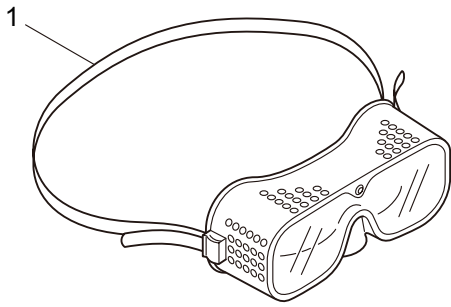



Ref. No.	Part No.	Part Name	Q'ty	Remarks
5-1	221460	Goggles	1	
5-2	228008	Box Spanner	1	17x19x(+)
5-3	054756	Double-ended Wrench	1	10x13
5-4	212300	Lever Handle	1	6X100L
5-5	219432	Wrench	1	4mm
5-6	219433	Wrench	1	5mm
5-7	236102	Nylon Head (L) 5	1	
5-8	263714	Foam Element	1	
5-9	274080	Element F	1	
5-10	285424	Element S	1	
5-11	237888	Instruction Manual	1	